


Trailblazer – Washer Assembly Guide

1. Gather 2x M5 x 15mm penny washers from the parts-kit.




2. Undo the 2x front screws and remove the front patch.

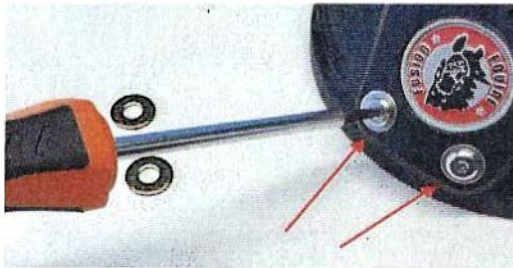


3. Locate and remove the 2x inserts.



4. Place the washers onto the inserts

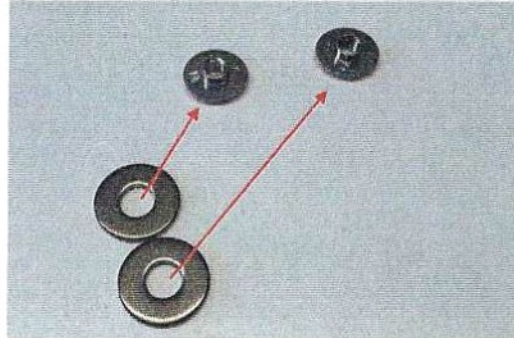


5. Place the washers onto the inserts

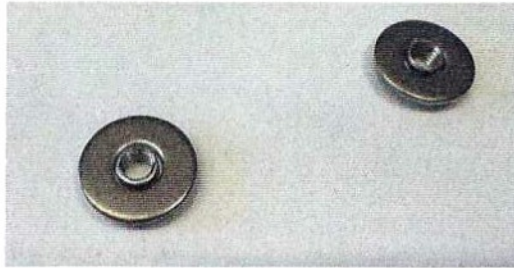

6. Re-insert the patch with the screws as shown



7. Screw the inserts with the washers onto the shoe as shown. **CAUTION:** This may require some force. Take care not to strip the insert threads. Do not over-tighten the screws as this may cause damage to the hardware. Use hand tools only. Blue thread locker re-application is recommended.

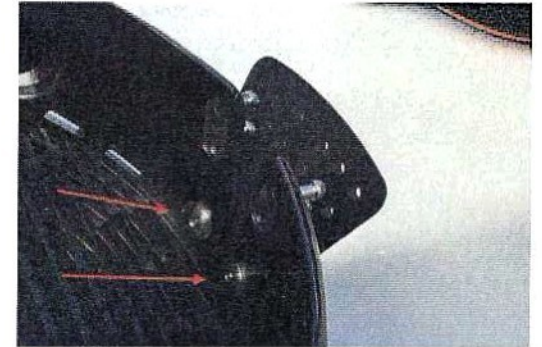

8. Ready to ride!

